




ASSEMBLY INSTRUCTION MODEL #WIN-617-GA-CL-MWP

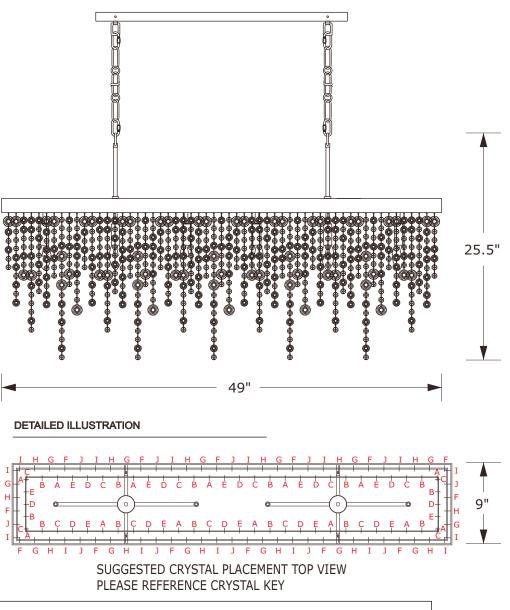




All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6 -Candelabra Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE THIS FIXTURE IS DAMP RATED

How to Install

- 1.Determine preferred hanging height and adjust to the required
- 2.On both sides, feed wires through the hanging stem and chain.
- 3.Attach the stem onto the fixture body.
- 4.On each piece of chain, hang one end at the loop on canopy and the second end at the loop on the top of stem.
- 5.Insert recommended bulb (not included).
- 6.Dress the crystal strands as illustrated.

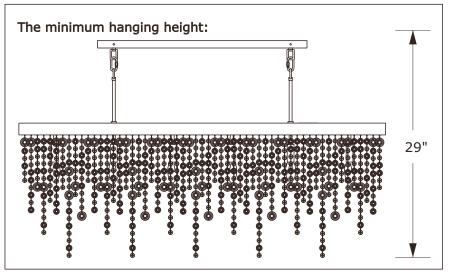

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.





PART NUMBER MODEL #WIN-617-GA-CL-MWP

B= -

F= -

H= -

Crystal Key

A.14 Sets.

(5)14mm + (4)20mm + (1)30mm

B.14 Sets.

(7)14mm + (5)20mm + (1)30mm

C.14 Sets.

(3)14mm + (6)20mm + (1)30mm

D.12 Sets.

(10)14mm + (4)20mm + (2)30mm

E.12 Sets.

(6)14mm + (4)20mm + (1)30mm

F.14 Sets.

(4)14mm + (2)20mm + (1)30mm

G.14 Sets.

(3)14mm + (3)20mm + (1)30mm

H.14 Sets.


(5)14mm + (4)20mm

I.16 Sets.

(3)14mm + (2)20mm + (1)30mm

J.12 Sets.

(5)14mm + (2)20mm + (1)30mm

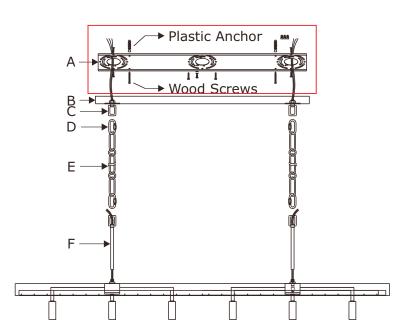

Part Number

A. (1) - Mounting Hardware

include:

(1) - Mounting Plate

(4) - Machine Screw

(3) - Wire Connector

(2) - Plastic Anchor

(2) - Wood Screw

B. (1) - Canopy(L28",W4.5",H0.75") #XRE617GACAN28IN

C. (4) - Fixture Loop

D. (4) - Quick Link

E. (2) - Hanging Chain(each72",5.0mm) #XRE617GACHA5MM

F. (2) - Hanging Stem(6",12.7mm) #XRE617GASTEM6IN

For installation of mounting plate:

- 1.Please measure the distance between the two mounting keyholes on the mounting plate.
- 2. Make two points on the ceiling according to the distance measured above.
- 3.Drill two holes at the two points and insert the plastic anchors.
- 4. Put the mounting plate over outlet box and insert two wood screws in the plastic anchors and tighten them.