






### ASSEMBLY INSTRUCTION MODEL#XAV-B9304-VG-BL





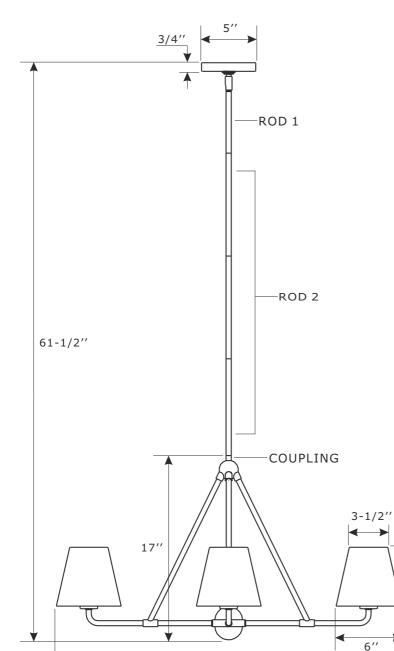

31-7/8"



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate

local electrical codes.



You will need 4-Medium Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE This fixture is Damp rated

#### How to install

5-3/8"

- 1. Determine the preferred hanging height and adjust to the required rods.
- 2. Feed the wires through the rods and connect them together.
- 3. Slip collar ring and canopy over the rod assembly.
- 4. Slip mounting strap with swivel along wire and thread it into the top of the rod assembly.
- 5. Raise fixture up and attach mounting strap to the outlet box using two outlet box screws.
- 6. Change last sentence to slide collar ride up to canopy and thread it onto the screw collar, securing the canopy.
- 7. Install the metal shade onto the socket.
- 8. Install the bulb(not included) into the socket.





## ASSEMBLY INSTRUCTION MODEL#XAV-B9304-VG-BL

# Part Number

## Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy W5"xH3/4" #XRF9302VGCAN5IN
- C. (1)-Collar ring
- D. (1)-Rod D1/2"xL6" #XRF9302VGROD6IN
- E. (3)-Rod D1/2"xL12" #XRF9302VGROD12IN
- F. (4)-Metal shade #XRF8321BLSHA6IN
- G. (4)-Socket

