

# CRYST RAMA



## ASSEMBLY INSTRUCTION MODEL #GAB-B7312-GA

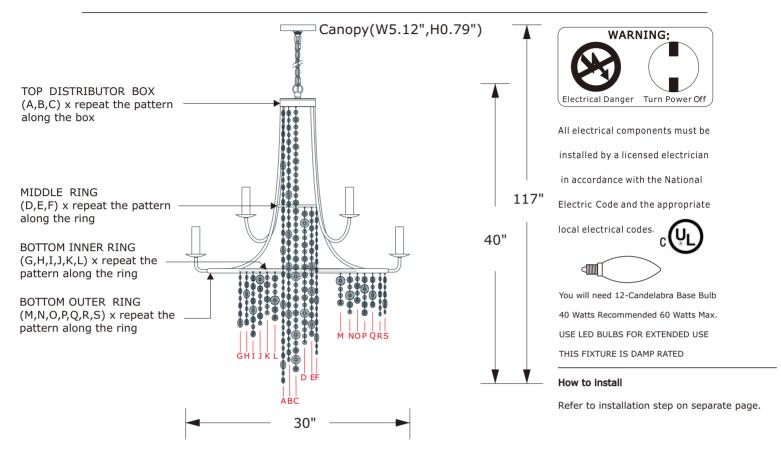

#### DETAILED ILLUSTRATION

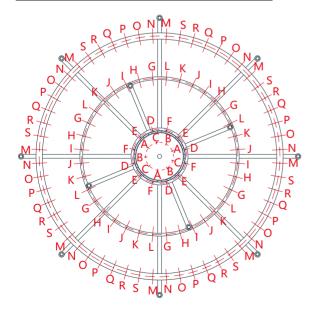

- E= -**@e@e@@e@**@@e@@@@

#### Crystal Key

- A.3 Sets.
- (15)14mm + (17)20mm + (4)30mm B.3 Sets.
- (13)14mm + (16)20mm + (4)30mm
- C.3 Sets. (20)14mm + (13)20mm + (3)30mm D.4 Sets.
- (8)14mm + (8)20mm + (2)30mm E.4 Sets.
- (5)14mm + (8)20mm + (3)30mm F.4 Sets.
- (12)14mm + (6)20mm + (2)30mm G.6 Sets.
- (3)14mm + (3)20mm + (1)30mm H.6 Sets. (4)14mm + (2)20mm + (1)30mm
- I.6 Sets.
- (2)14mm + (5)20mm + (1)30mm
  - H= **⊷⊛⊛⊗⊛⊛⊛**

  - L= -**@@@@@@**
  - M=•����

  - 0= ● ● ●

  - - S= \* \* \* \* \* \*


J.6 Sets. (4)14mm + (2)20mm + (1)30mm K.6 Sets. (4)14mm + (2)20mm L.6 Sets. (2)14mm + (3)20mm + (1)30mm M.8 Sets. (2)14mm + (1)20mm + (1)30mm N.8 Sets. (2)14mm + (2)20mm + (1)30mm 0.8 Sets. (2)14mm + (2)20mm P.8 Sets. (1)14mm + (3)20mm + (1)30mm Q.8 Sets. (1)14mm + (2)20mm + (1)30mm R.8 Sets. (4)14mm + (2)20mm S.8 Sets. (2)14mm + (2)20mm + (1)30mm

WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov.

## CRYST rama LIGHTING THE WAY FOR SIXTY YEARS



PART NUMBER MODEL #GAB-B7312-GA

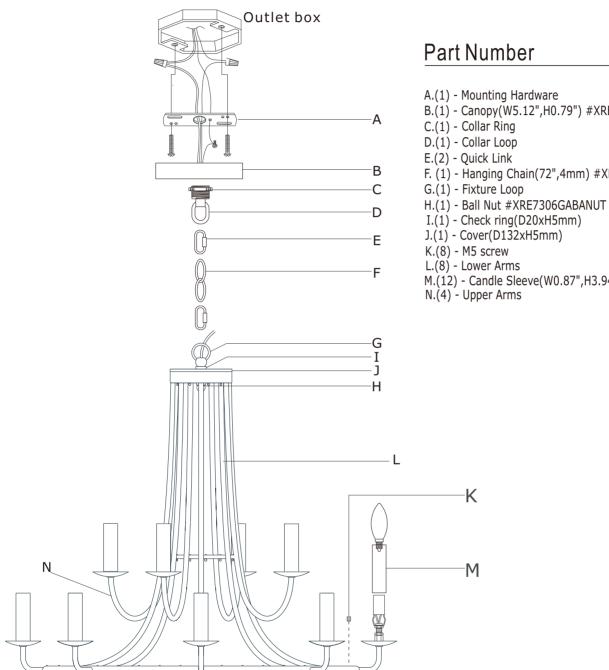

## Part Number

- A.(1) Mounting Hardware
- B.(1) Canopy(W5.12",H0.79") #XRE7312GACAN5.12IN

- F. (1) Hanging Chain(72",4mm) #XRE7304GACHA4MM
- G.(1) Fixture Loop


- J.(1) Cover(D132xH5mm)
- M.(12) Candle Sleeve(W0.87",H3.94") #XRE7312GACDL3.94IN N.(4) Upper Arms





## Crystorama.com

### ASSEMBLY INSTRUCTION MODEL #GAB-B7312-GA

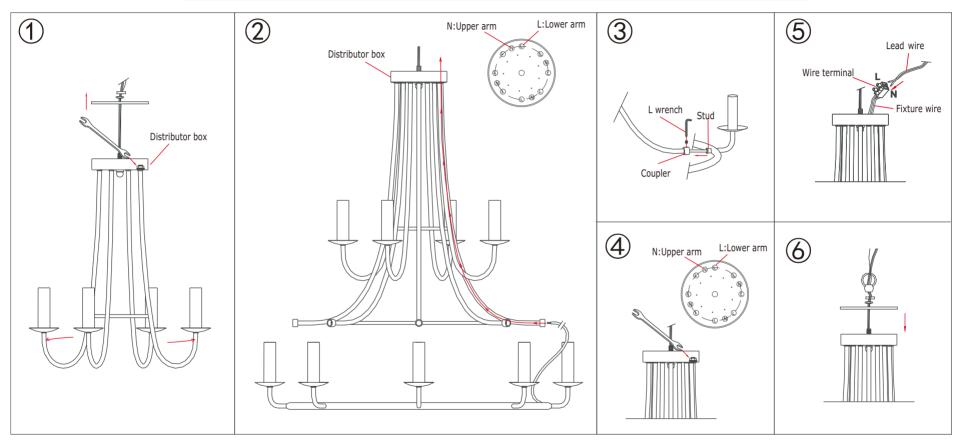

Please place the frame on a soft cloth covered table before installation.

Please do not remove the bubble wrap on the frame until the installation is completed..

- 1. Loosen the cover by removing the loop, check ring and hex nut. Loosen the hex nut on the top of the arms using a wrench and spread the arms out equally.
- 2. Feed the lead wire from bottom ring through the end of one arm(the end with coupler) and exit out of the distributor box.
- 3. Insert the coupler, at the bottom end of the lower arm, onto the stud on the bottom ring and secure it by inserting a screw and tightening it with the included "L" wrench. Repeat for the other lower arms.
- 4. Secure the other end of the arms onto the distributor box by tightening up the hex nut.
- 5. Connect the wire to the wire terminal .
- 6. Tuck the wires carefully inside the distributor box and put the cover back and secure with hex nut. Place the check ring over the hex nut and secure with loop.
- 7. Dress the crystal as illustrated.
- 8. Slide the candle sleeve over the socket and install the bulb(not included).